



CL6 Collator arm replacement



The CL6 has 6 stations for paper. To load the paper move the handle to the rear of the unit.





Moving the handle forward will move the arms forward and slide one piece of paper from each section forward so it may be removed from the unit.



Wide part of slot

If an arm comes off or if you want to replace the arms move the handle to cover the wide part of the slot as shown.



Pull the handle off one corner at a time until it is free from the unit.





One the handle is free from the unit. Pull the handle with the arms out of the unit.






Each are clips onto the handle and can be reinstalled or removed as needed



Arrow

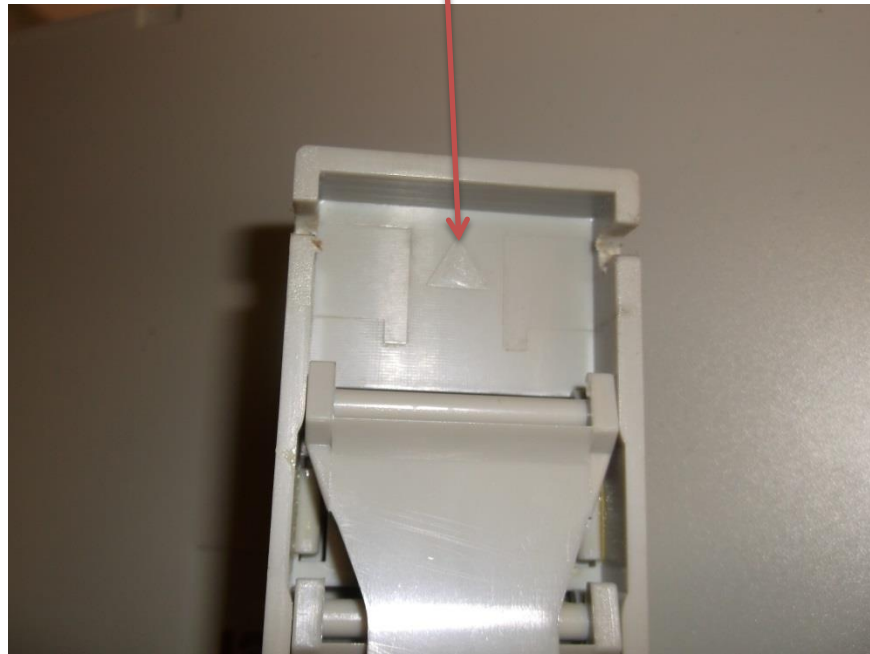

If all the arms come off the handle, make sure you reinstall the arms so the arrow on the handle will be facing up once you reinstall the handle on the unit.



To reinstall the handle, line the handle up with the wide spots of the slots and push it back onto the machine.