


# REINER

## Operating Instructions

### Multi - Printer Models 780 / 785 / 787

Multi-purpose electronic stamp  
with selectable printing functions

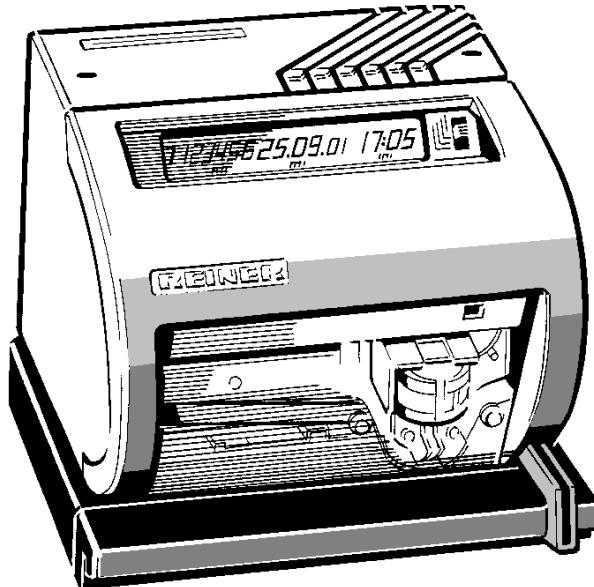

© 2004 Ernst Reiner GmbH & Co. KG

All rights reserved. Translations, reprints, or any other form of reproduction of this manual, in whole or in part, and in any form whatsoever require our expressed permission in writing.

We reserve the right to alter the contents of this manual without notice. This manual has been prepared with the greatest care, however, we accept no responsibility for possible errors or omissions, or for damage that may result from such errors or omissions.

## Table of contents


Safety instructions .....	4
Control elements .....	5
Transport lock .....	6
Choosing a suitable location .....	6
Mains connection and commissioning .....	6
Accumulator .....	7
Setting the date and time .....	8
 Printing .....	9
Model 780 - 785: Setting of the depth stop with contact switch .....	9
Model 787: Setting of the depth stop with contact switch .....	10
Switching off the depth stop with contact switch .....	10
Setting of the side stop .....	11
Impression positioning .....	11
Activating upside down imprint .....	11
 Setting the imprints .....	12
Stored imprints .....	13
Setting a pre-text .....	18
Functional description of the Numberer (num) .....	20
Setting of Numberer / Number / Text .....	21
 Settings .....	22
Changing the ink-ribbon cassette .....	26
Changing the ink-ribbon protection mask .....	27
 Chip-card functions .....	28
Key function (printing disable) .....	29
Operator's identification on the chip card .....	29
Printing of the first print line (Line 1) from chip card .....	29
Printing of the second print line (Line 2) .....	30
Printing of the second print line with Model 785 .....	30
Printing of the second print line with Model 787 .....	31
 RS 232 interface .....	33
Radio clock .....	34
User's hints and error codes .....	35
Reset .....	37
Technical data .....	38
Certifications .....	39

## Safety instructions

**In this section, you will find safety instructions that you must always observe when handling and working with your Electronic Stamp.**

- This machine complies with the relevant safety regulations for information technology equipment, including office machinery
- Transport the machine only in its original package or other suitable package that provides protection against shock and impact
- If the machine is taken from a cold environment into a warm room, dew may form on it. Wait until the machine has warmed up to room temperature and is absolutely dry before starting to use it.
- Check that the local mains supply corresponds to the voltage, given on the typeplate
- This machine is intended for use with a safety-tested mains supply and must only be connected to a mains socket with a protective earth
- Make sure that the locally-installed mains socket with protective earth, which you use to connect the machine, is readily accessible
- The machine has no ON / OFF switch. To disconnect it from the mains, you must pull out the plug.
- Arrange the connection leads so that they do not create a hazard (danger of tripping) and cannot be damaged.
- Take care that no objects (e.g. necklaces, paper clips etc.) or liquids fall into the machine (danger of electric shock or a short circuit)
- In an emergency (e.g. in the event of damage to the machine casing, control elements or the mains lead, or if an object or liquid falls into the machine) disconnect the mains plug and notify your sales agent or our service department
- The machine contains components that carry a dangerous voltage when the machine is in service. The machine must only be opened by a qualified service-man. After maintenance or repair, the effectiveness of electrical protective measures must be checked to DIN VDE 0701. Unauthorised opening of the machine casing and improper repairs can cause considerable danger to the user (electric shock, fire hazard).
- Avoid contact with freely-accessible PCB components, electrostatic discharge could damage the machine or cause malfunctions
- Freely-accessible PCB components **do not** carry mains voltage

## Controls

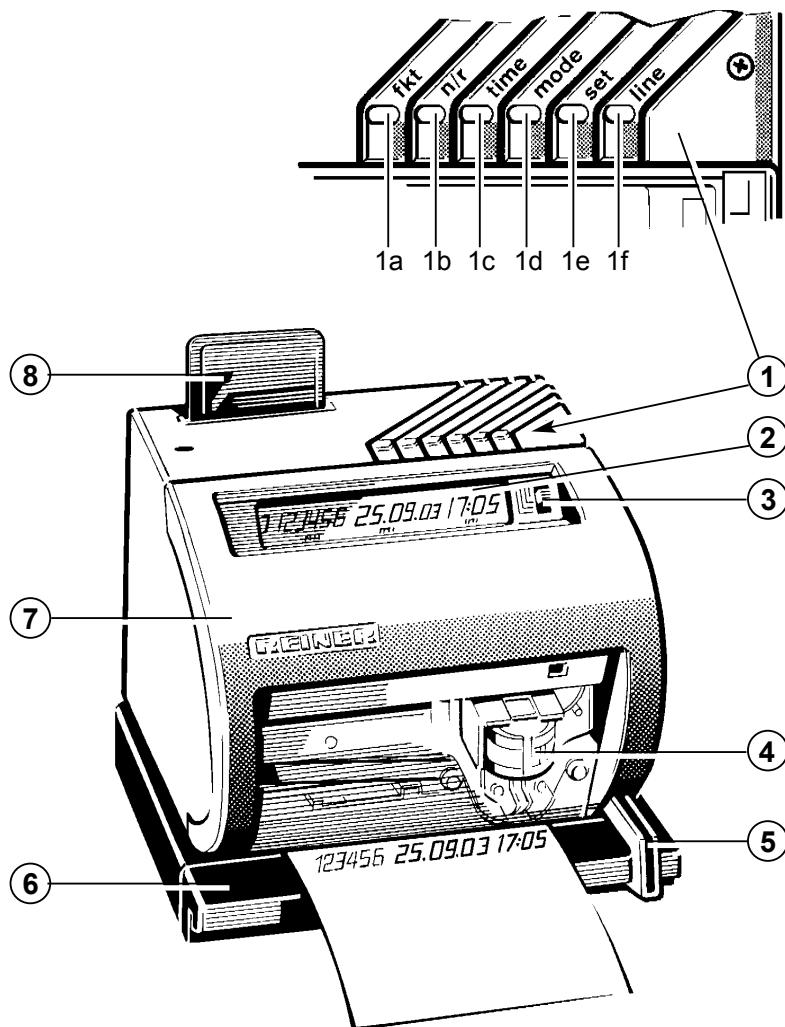

1	=	Keypad	2	=	Display
1a	=	Key [ fkt ]	3	=	Trigger mode switch
1b	=	Key [ n/r ]	4	=	Print head
1c	=	Key [ time ]	5	=	Side stop
1d	=	Key [ mode ]	6	=	Feedplate (table trigger)
1e	=	Key [ set ]	7	=	Front cover
1f	=	Key [ line ]	8	=	Chip card for Model 785 / 787

## Transport lock

- ▶ Take out carton next to the print head on the left.  
Attention! While taking out the carton don't pull out the ink ribbon.
- ▶ Take out carton on the left between upper part of machine and document table

## Choosing a suitable location

The choice of location for a REINER Multi-Printer is not particularly critical. However, for safe, correct operation, please observe the following points:

- Place the machine on a stable, smooth, and level surface in a room with adequate ventilation (see also page 38, 'Technical data')
- If the radio-clock function is to be used, make sure there is good radio reception
- Make sure that the mains socket which you use to connect the machine is readily accessible

## Mains connection and commissioning

**Make sure that the device is connected to the correct mains voltage** as specified on the type plate on bottom of the device.

~ 230 V, 50 Hz or ~ 115 V, 60 Hz



**Note**

The device is also intended for IT - performance distributing net with a phase voltage of ~ 230 V

After plug in of the mains connector, the display indicates the following:

01 000000 27.05.08 09:38 (see also page 17, imprint no. 38)  
rep num date h min

## Accumulator



### Note

The accumulator saves data at power failure and is also sufficient for a limited number of prints (see page 38, 'Technical data').

Meaning of the accumulator symbol  in the display:

#### • Device is connected to mains:

 is not displayed : Accumulator is fully charged.

 is flashing : (by high frequents of printing) With constantly frequenting of printouts, it is possible to trigger up to 100 prints. Following the display **CHArGE bAT** will appear.

Display **CHArGE bAT** : Accumulator is charging, device not yet ready for use. The device is ready again in approx. 15 minutes. The accumulator is fully recharged after approx. 20 hours.

#### • Device is not connected to mains:

 is displayed : Unit is in accumulator operation

 is flashing : Accumulator is close to be discharged. About 100 prints are possible, subsequent the display **EMPTY bAT** will appear.

Display shows **EMPTY bAT** or no display: Accumulator is discharged. Stamping is not possible. Connect the device to the mains, after that the display **CHArGE bAT** will appear.

## Setting the date and time



### Note

- Date and time can only be set if a selected imprint contains at least the date (see pages 13 ... 17)
- The device disposes of dual input of time and date, designated as **date 1** and **date 2**

**Date 1** will be used for the internal stored imprints

**Date 2** will be used exclusively in 785. In this case, **date 1** and **date 2** are used for special stamp pictures, stored on the chip card

### Setting:

- ▶ Press **[ time ]**: The display shows **MInUTE 1**  
The date and time appear and the minutes are flashing.  
  
If **PASS 0000** appears in the display, then date and time setting is protected by a password. Enter the password via the keys **[ set ]** and **[ mode ]** (see also page 25, 'Password clock')
- ▶ Press **[ line ]** to switch between **Date 1** and **Date 2**.  
The display changes corresponding between **MInUTE 1** and **MInUTE 2**
- ▶ Press **[ set ]** repeatedly until desired minutes appear
- ▶ Press the key **[ mode ]**: The hour display flashes.  
Set the value of hours with **[ set ]** as described above
- ▶ Press the key **[ mode ]** for successively calling the year, month and day and set in each case with the key **[ set ]**
- ▶ Press **[ time ]** to exit the date and time settings.  
The set imprint appears on the display.



## Printing

The printing process can only be triggered when no numerals or words are flashing in the display. If necessary, press [ time ] or [ n/r ] to stop the display from flashing. The printing process can be triggered in various ways, selected by the trigger mode switch (3).

Take off the front cover and set the trigger mode switch to the desired trigger mode by pushing it up or down.


### Description of the different trigger modes:

- 1 = Printing **only** by pressing down the feedplate
- 2 = Printing **only** by depth stop with contact switch
- 3 = Printing by depth stop with contact switch **and** pressing down the feedplate
- 4 = Printing by depth stop with contact switch **or** by pressing down the feedplate



### Model 780 - 785: Setting of the depth stop with contact switch

- ▶ Place the device on its left side
- ▶ Turn the red wheel (10) in the direction of the arrow to **position 1** (see figure)
- ▶ Press down the yellow slide (9) and move it to the desired value on the scale (11).  
(scale value = distance from the top edge of the paper to the centre of the imprint in mm)
- ▶ Release the yellow slide (9)
- ▶ Set the desired trigger mode

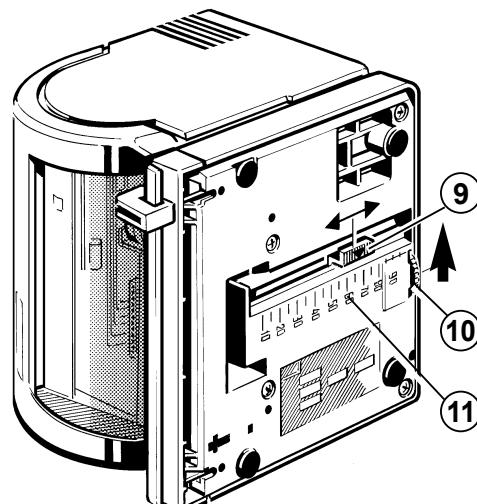

## Model 787: Setting of the depth stop with contact switch


- ▶ Move the trigger mode switch (3) to position 2
- ▶ Tip the machine on to its left side
- ▶ Loosen the clamping screw (15)
- ▶ Move the complete depth-stop assembly (16) to the required dimension on scale (17) (scale value = distance from upper margin to bottom edge of impression in millimetres)



Caution

**Be careful: Danger of squeezing the fingers!  
The depth-stop (16) may be hot.**

When adjusting, take care that the depth-stop unit does not jam in its guide. Touching the depth-stop unit near its guide axis (18) helps to prevent jamming.

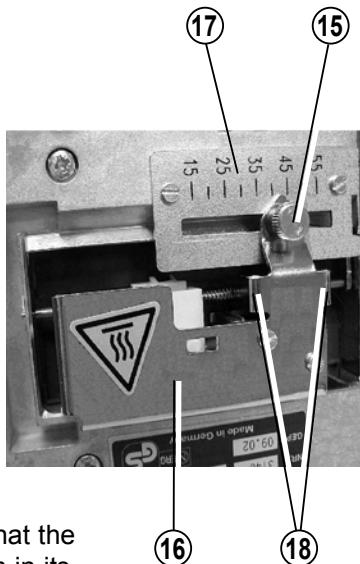

- ▶ Retighten the clamping screw (15)
- ▶ Set the desired kind of triggering (see page 9)

## Switching off the depth stop with contact switch

- ▶ Push the yellow slide (figure on page 9) to scale value 95
- ▶ Turn the red setting wheel (10) in the opposite direction of the arrow (figure on page 9) to position 0
- ▶ Turn the trigger mode switch (3) to the desired kind of triggering



Note

With Model 787, the depth stop cannot be switched off

## Setting of the side stop

The red side stop for documents is located at the feedplate. The adjustment can be carried out by moving the stop lateral.

## Test of the imprint position

- ▶ Carry out a test imprint




The rectangular cut-out (12) in the foil mask marks the printing position. The imprint commences at the left mark (13) on the foil mask

## Activating upside down imprint

- ▶ Keep the key [ fkt ] pressed and at the same time press the key [ set ]  
An upside down symbol appears at the top right of the display.  
The imprint commences at the right mark (14) on the foil mask.



To switch off upside down imprint, press the keys [ fkt ] and [ set ] again.  
The symbol disappears from the display.

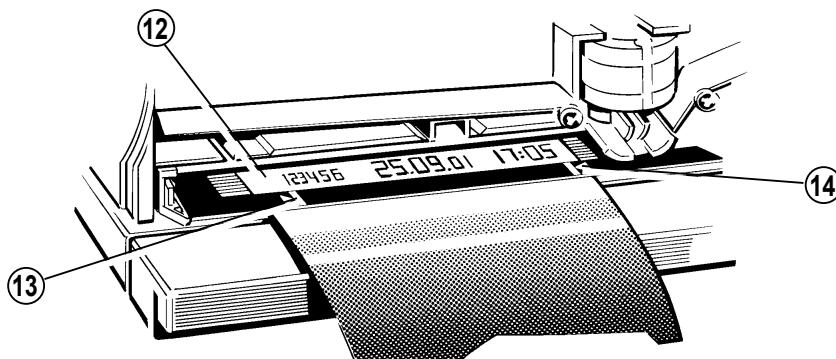

## Setting the imprints



Altogether there are 39 standard imprints stored in the device. An overview of the stored imprints is shown on the pages 13 ... 17. To select a desired imprint, enter its corresponding number as follows:

- ▶ Press the key **[ mode ]** for at least 5 seconds until **SETTInGS** appears in the display  
If **PASS 0000** appears, the settings are protected by a password.  
Enter the password via the keys **[ set ]** and **[ mode ]**
- ▶ Press **[ line ]** the display shows **ChiPCArD**
- ▶ Press **[ mode ]** the display shows **ST PICTUrE**
- ▶ Press **[ line ]** the number of the imprint is displayed with one digit flashing
- ▶ **Entering the number:** Press **[ set ]** repeatedly, until the desired tens digit number is shown
- ▶ Press **[ mode ]** the next digit is flashing
- ▶ Press **[ set ]** repeatedly until the desired digit is shown
- ▶ Press **[ n/r ]** repeatedly, until the imprint appears in the display



By setting **imprint 00** (possible only at Mod. 785 and 787) the device prints exclusively data stored on a chip card.  
(see also page 28, 'Additional functions in Model 785 + 787')

#### **Examples of imprint no. 38 with explanations:**

**QUIT.** 123456 **29.05.08** **09:40**  
pre-text number date time

123456 29.05.08 09:40 BSP  
number date time operator's identification  
from chip card

## Stored imprints



Note

The following imprints are shown below at their actual size. An imprint which can be expanded with a pre-text is shown under this with a pre-text example. The pre-texts and the names of the months depend on the set language (see page 23).

Daters	No. Imprint	Operator's identification Mod. 785/787
	<b>00</b> <i>Reserved for use of chip cards with customized imprints and functions (Mod. 785 and 787)</i>	yes
	<b>01</b> <b>29. MAY 2008</b> <b>SENT 29. MAY 2008</b> (pre-text sample)	yes yes
	<b>02</b> <b>29. 05. 2008</b> <b>RECV'D 29. 05. 2008</b> (pre-text sample)	yes yes
	<b>03</b> <b>2008 - 05 - 29</b> <b>INV. 2008 - 05 - 29</b> (pre-text sample)	yes yes
	<b>04</b> <b>MAY 29 2008</b> <b>FAX MAY 29 2008</b> (pre-text sample)	yes yes
	<b>05</b> <b>2008 001</b> <b>RECV'D 2008 001</b> (pre-text sample)	yes yes
	<b>06</b> <b>29. MAY 2008</b> <b>PAID 29. MAY 2008</b> (pre-text sample)	yes yes

Numberers with date right	Numberers with date right	Operator's identification Mod. 785/787
Numbers	No.	Imprint
07	free	
08	<b>12345678</b> <b>RECVD 12345678</b> (pre-text sample)	yes yes
09	<b>12345678</b> <b>SENT 12345678</b> (Pre-text sample)	yes yes
10	<b>12345678</b> <b>INV. 12345678</b> (pre-text sample)	yes yes
11	<b>1234567890</b> <b>FAX 1234567890</b> (pre-text sample)	yes yes
12	<b>1234567890</b> <b>FAX 1234567890</b> (pre-text sample)	yes yes
13	<b>1234567890</b> <b>RECVD 1234567890</b> (pre-text sample)	yes yes
14	<b>12345678 29. MAY 08</b> <b>FAX 12345678 29. FEB 08</b> (pre-text sample)	yes no
15	<b>12345678 29. 05. 08</b> <b>FAX 12345678 29. 05. 08</b> (pre-text sample)	yes no

Numberer with date right	No. Imprint	Operator's identification Mod. 785/787
16	<b>12345678 08 - 05 - 29ye</b>	
	<b>RECVD 12345678 08 - 05 - 29</b>	no
(pre-text sample)		
17	<b>12345678 MAY 24 08</b>	yes
	<b>INV. 12345678 MAY 24 08</b>	no
(pre-text sample)		
18	<b>12345678 2008 001</b>	yes
	<b>INV. 12345678 2008 001</b>	no
(pre-text sample)		
19	<b>12345678 29. MAY 2008</b>	yes
	<b>FAX 12345678 29. MAY 2008</b>	no
(pre-text sample)		
20	<b>29. MAY 08 12345678</b>	yes
	<b>FILE 29. MAY 08 12345678</b>	no
(pre-text sample)		
21	<b>29. MAY 08 12345678</b>	yes
	<b>PAID 29. MAY 08 12345678</b>	no
(pre-text sample)		
22	<b>08 - 05 - 29 12345678</b>	yes
	<b>FAX 08 - 05 - 29 12345678</b>	no
(pre-text sample)		
23	<b>MAY 29 08 12345678</b>	yes
	<b>SENT MAY 29 08 12345678</b>	no
(pre-text sample)		

Numberer with date left	No.      Imprint	Operator's identification Mod. 785/787
	<b>24</b> <b>2008 001 12345678</b> <b>RECVD 2008 001 12345678</b> (pre-text sample)	yes no
	<b>25</b> <b>29. MAY 2008 12345678</b> <b>INV. 29. MAY 2008 12345678</b> (pre-text sample)	yes no
	<b>26</b> <b>29. MAY 08 08:45</b> <b>SENT 29. MAY 08 08:45</b> (pre-text sample)	yes no
	<b>27</b> <b>29. 05. 2008 08:45</b> <b>FAX 29. 05. 2008 08:45</b> (pre-text sample)	yes no
	<b>28</b> <b>2008 - 05 - 29 08:45</b> <b>FILE 2008 - 05 - 29 08:45</b> (pre-text sample)	yes no
	<b>29</b> <b>MAY 29 2008 08:45</b> <b>RECVD MAY 29 2008 08:45</b> (pre-text sample)	yes no
	<b>30</b> <b>2008 001 08:45</b> <b>ORDER 2008 001 08:45</b> (pre-text sample)	yes yes
	<b>31</b> <b>MAY 29 2008 AM 08:45</b> <b>FAX MAY 29 2008 AM 08:45</b> (pre-text sample)	yes no

No.	Imprint	Operator's identification Mod. 785/787
32	<b>free</b>	
33	<b>123456 29. MAY 2008 08:45</b> (Pre-text not possible)	no
34	<b>123456 29. 05. 2008 08:45</b> (Pre-text not possible)	no
35	<b>123456 2008 - 05 - 29 08:45</b> (Pre-text not possible)	no
36	<b>123456 MAY 29 08 08:45</b> (Pre-text not possible)	no
37	<b>000000 2008 001 08:45</b> (Pre-text not possible)	yes
38	<b>123456 29. 05. 08 08:45</b> <b>SENT 123456 29. 05. 08 08:45</b>	yes no
39	<b>123456 MAY 29 08 AM 08:45</b> (Pre-text not possible)	no
40	<b>free</b>	

Time stamp with number and date

**Note**

Pre-text cannot be set with all imprints. This is only possible if the imprint does not take the complete print line (see table on pages 13 ... 17). The desired language must be set before selecting the pre-text (see also page 23)

- ▶ Press **[ n/r ]** : If **PASS 0000** appears in the display, the setting of pre-text is protected by a password. Enter the password via the keys **[ set ]** and **[ mode ]**
- ▶ Press **[ line ]** repeatedly, until the display shows **P-TEXT**
- ▶ Select the desired pre-text with the key **[ set ]**  
**Note:** Display **-----** means the setting without pre-text
- ▶ Press **[ n/r ]** : The selected imprint appears in the display

The pre-text is shown on the display only when an imprint *without numberer* is set

**stored pre - texts:**

<b>Germany (0)</b>	<b>France (1)</b>	<b>England (2)</b>	<b>Italy (3)</b>
EING.	RECU	RECV.D	ARCH.
AUSG.	PAYE	SENT	ARR.
BEARB	COPIE	FILE	PART.
BEZ.	AVOIR	INV.	NUMER
KASSE	URGT.	ORDER	PAGAT
QUIT.	DUPLI	ENT.D	CASSA
REG.	RAPPL	DRAFT	PROT.
BEST.	ANNUL	PAID	RACC.
GEBU.	FCTE.	RECPT	REGIS
FAX	CONF.D	FAX	RICEV.
ERH.	ORIG	ORIG	SEGR.
ORIG.	COMPT	REG.D	VALUT

<b>Spain (4)</b>	<b>Portugal (5)</b>	<b>Flemings (6)</b>	<b>Norway (7)</b>
ENTR.	ENTR.	ING.	INNG.
SAL.	SAÍDA	UITG.	KASSE
TRAT.	ELABO	BEW.	BET.
ARCHI	ARQVO	AFLEG	REG.
CAJA	CAIXA	KAS	BOKF.
PGDO.	PAGO	BET.	BEKR.
VENT	BALC.	LOKET	MOTT.
RECIB	RECIB	KWIT	BESV.
M.EXT	CAMBS	DEV.	LEV.
REG.	RGST.	GEREG	FAKT.
ANOT.	LANÇ.	GEB.	OPPL.
CONF.	CONFI	BEV.	OPRH.

<b>Sweden (8)</b>	<b>Danmark (9)</b>	<b>Finland (10)</b>	<b>Poland (11)</b>
ANKOM	INDG.	SAAP.	ORYG.
AVS.	UDG.	LÄHET	KOPIA
BEARB	BEARB	KÄSIT	WPL.
KASSA	KASSE	KASSA	PILNE
BET.	BET.	KUIT.	WYSŁ.
EXP.	KVIT.	TALL.	AKCEP
KVITT	BOGF.	MAKS.	SPR.
DNR.	BESV.	KOPIO	WAŻNE
BOKF.	LEV.	ARKIS	ZAPŁ.
BEKR.	FAKT.	ALKUP	POUF.
LEV.	EKSP.	MITÄT	DRUKI
VERIF	FAX	HYVAK	NR

<b>Hungary (12)</b>	<b>Czech Rep. (13)</b>	<b>Croatia (14)</b>	<b>Cyrillic (15)</b>
RK.	"	IZLAZ	КОПИЯ
FIZ.	".J.	ULAZ	ВХ.№
ÁTUT.	".Ú.	PLA <sup>~</sup>	ИСХ.№
KÖNYV	".OBJ	PONIŠ	ВАЖНО
IKT.	".ZAK	TERE <sup>~</sup>	ВЕРНО
BEV T	DAT.	ISPOR	ЦЕНА
KIAD.	ZN.		СЧЕТ
ELL.	ORIG.		ЗАКАЗ
ORIG.	K.		ФАКС
REND.	P. IJ.		
COPY	VYD.		
SZLA.	PLAC.		

## Functional description of the Numberer (num)



**Note**

The Numberer enables the ongoing numbering of imprints into corresponding fields, indicated as **num** at the different, stored imprints (see pages 13 ... 17)

The device disposes of dual numberer:

**Numberer 1** 6 or 8 characters (depending on set imprint) will be used for the stored, device internal imprints

**Numberer 2** (1 ... 8 characters ) is used exclusive in Mod. 785 + 787 for special imprints, stored on the chip card

The **numbering field** can include following settings:

- **Setting of the starting number** (Setting see page 21, **AUT nr 1** respectively **AUT nr 2**)
- **Setting of repetition (rep)** enables the stamping of a constant number with the set repetition factor (0 ... 99) . This is displayed at the left (excepting the imprints 11 ... 13)
- **Incremental printing** of an adjustable minimal value up to a maximal value (setting see page 23, **Mode n1 / n2** )
- **Decreasing printing** of an adjustable maximal value to an adjustable minimal value (setting see page 23, **Mode n1 / n2** )
- **Skip** of numberer (adjustable 0 ... 99 ) (setting see page 23 / 24, **Skip n1** and **Skip n2**)
- **Minimal value of numberer** stored by pressing **[ fkt ]** and **[ set ]** . Symbol **└** appears behind **AUT nr 1** or **AUT nr 2** Repeated pressing the keys shows the stored value
- **Maximal value of numberer** stored by pressing **[ fkt ]** and **[ mode ]** . Symbol **┘** appears behind **AUT nr 1** or **AUT nr 2** Repeated pressing the key shows the stored value
- **Reset stored values of numberer** (min. and max.) Reset will be executed by pressing keys **[ fkt ]** and **[ n/r ]** The symbols **└** and **┘** disappear

- ▶ Press [ n/r ]: The display shows e.g. **rEP 01**.  
If **PASS 0000** appears in the display, this setting is protected by a password. Enter the password via [ set ] and [ mode ].
- ▶ To scroll through available menu items, press repeatedly [ line ].  
The choice depends on the set stamp picture.

<b>rEP</b>	<b>01</b>	= setting of repetition factor (00 ... 99) (00 = no increment count of numberer)
<b>P- TEXT</b>		= setting of pre-text (see also page 18 + 19)
<b>AUT nr 1</b>	<b>000000</b>	= setting value of numberer 1
<b>AUT nr 2</b>	<b>000000</b>	= setting value of numberer 2 (only Model 785 and 787 with chip card)
<b>FIX nr 1</b>	<b>000000</b>	= setting fixed valuation of numberer 1
<b>FIX nr 2</b>	<b>000000</b>	= setting fixed valuation of numberer 2
<b>TExT</b>	<b>(01 ... 12)</b>	= setting the contents of a text field 01 ... 12

- ▶ After selection of a menu, right-hand of it the actual value is displayed.  
The flashing position can be set by pressing [ set ].
- ▶ The remaining input-digits can be called by pressing [ mode ]  
and they can be set with [ set ].

**Note:** By setting the character **≡** the corresponding digit can be used as placeholder.

- ▶ Press key [ n/r ] to quit the input and leave this menu.  
The set imprint reappears in the display and Multi Printer is ready to print.

### Additional functions of the numberer

- ▶ Press [ fkt ] and simultaneously [ mode ] to reset the numberer to zero with retaining the repetition factor (rep).
- ▶ Press [ fkt ] and simultaneously [ fkt ] to interrupt the repetition (rep) and print the next number.  
The numberer increments to one number.

## Settings



### Note

The following menu 'Settings' features various adjustments and configuration options of Multi Printer.

To call this menu, keep **[ mode ]** pressed for at least five seconds until **SETTInGS** appears in the display. If **PASS 0000** appears, this menu is protected by a password. Enter the password via **[ set ]** and **[ mode ]**.

Description of the key-functions in menu:


**[ line ]** calling a displayed menu level


**[ set ]** setting of numerical values


**[ mode ]** setting of non-numeric values. If a numerical value is displayed, the various digits will be called

**[ n / r ]** exit the menu


Keep **[ mode ]** pressed for at least 5 sec. If necessary, enter password

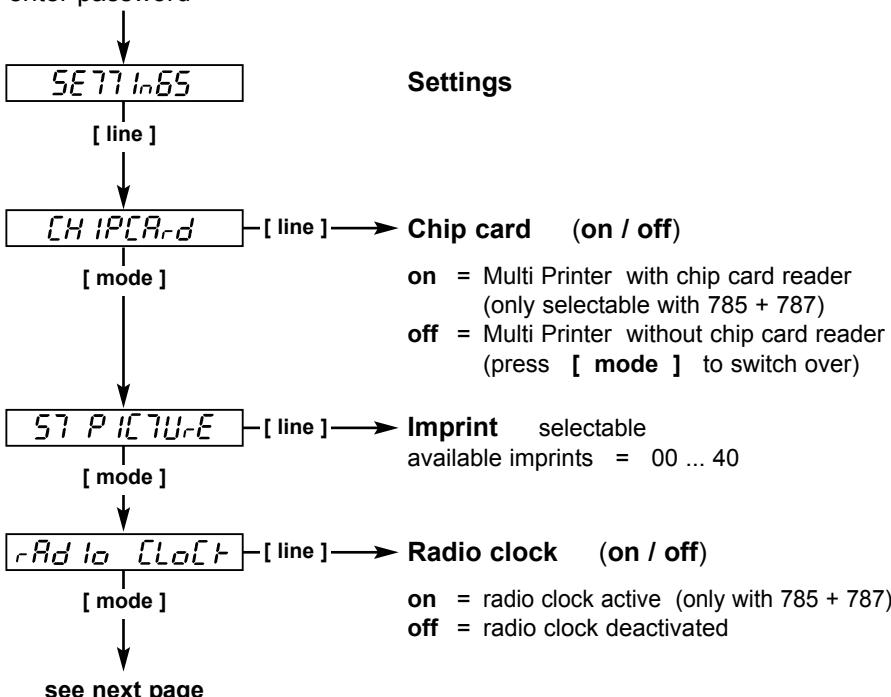

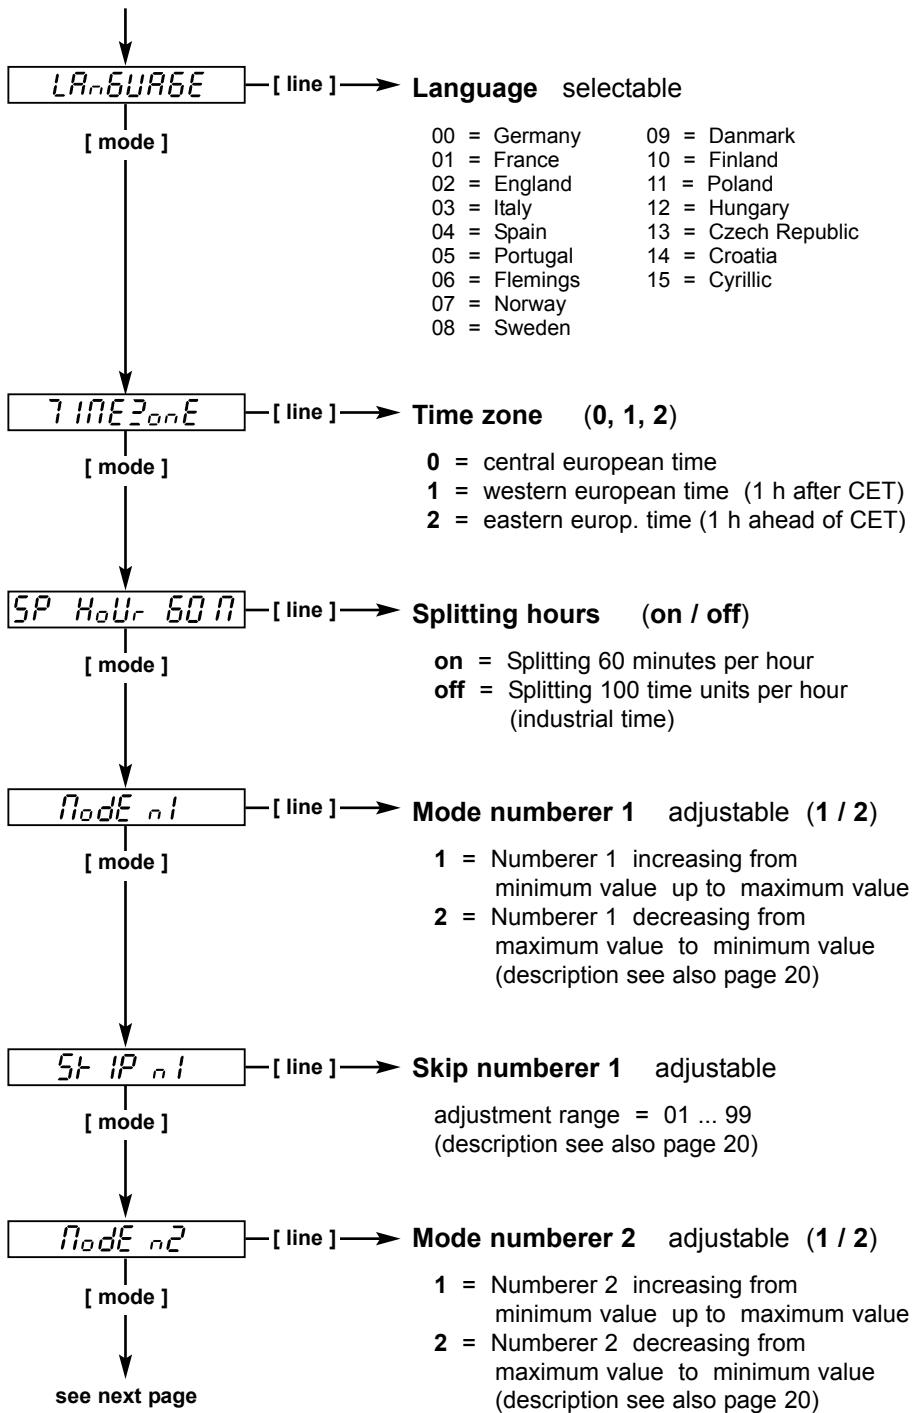

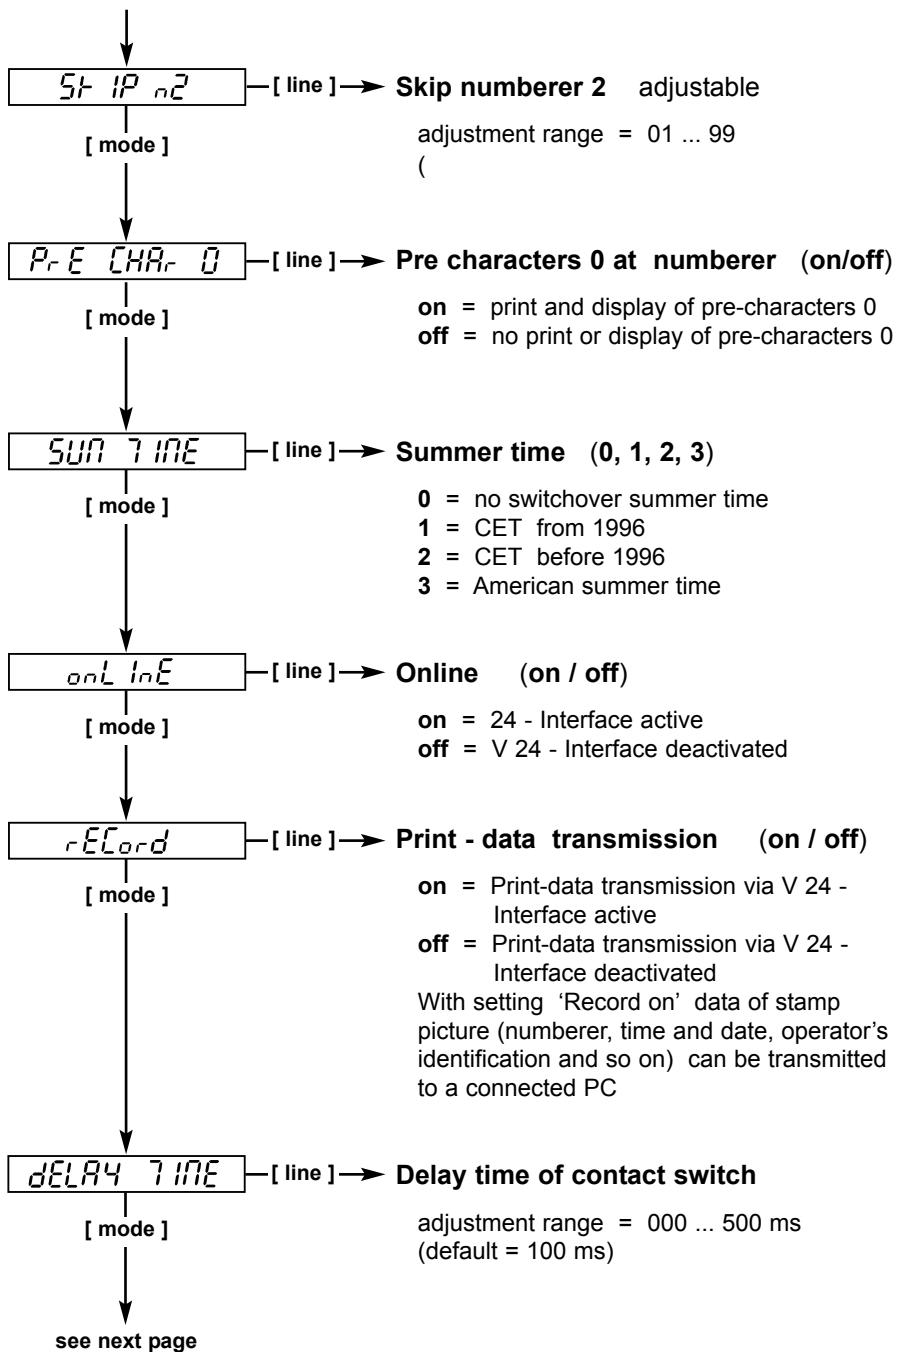

see next page

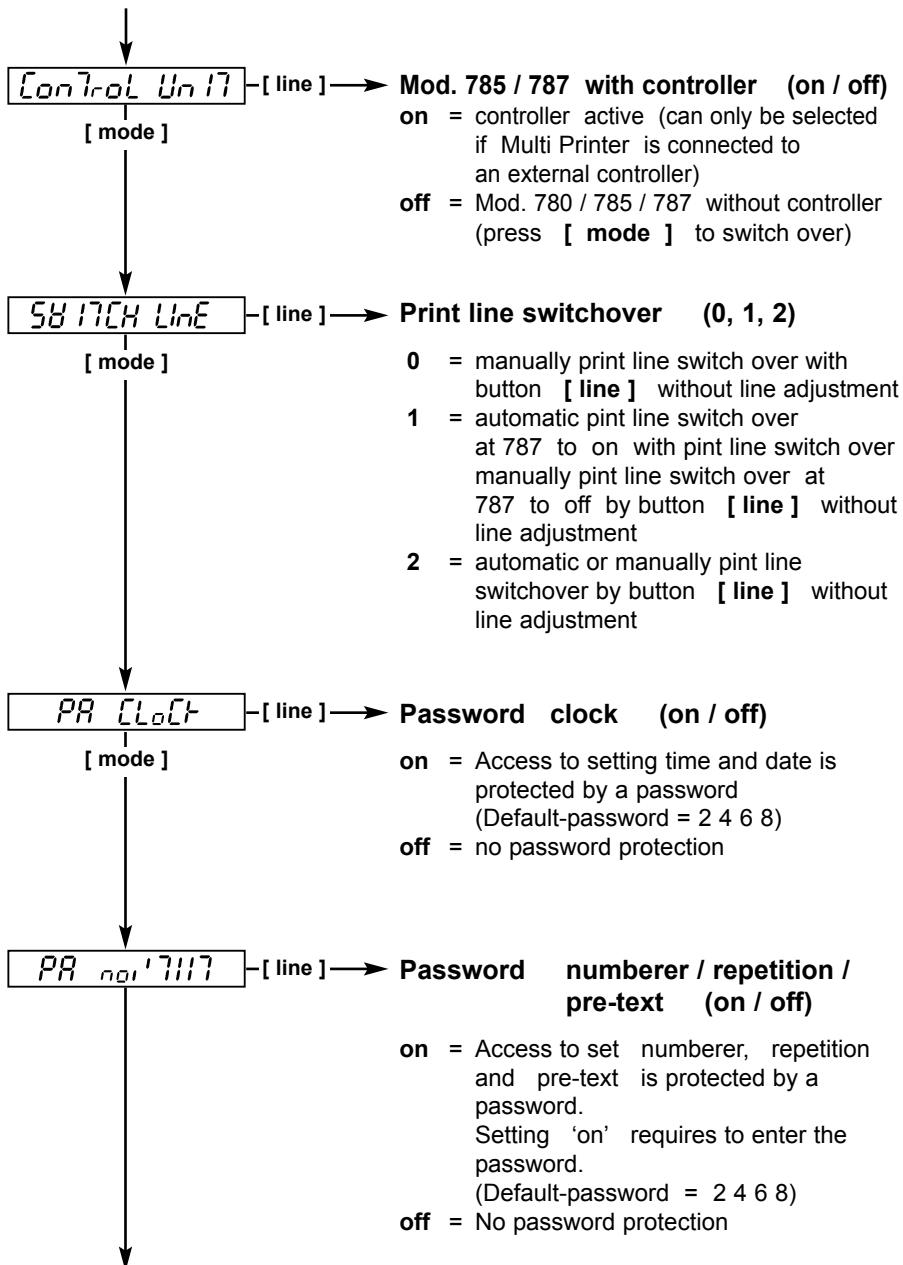


to exit 'Settings' press **[ n / r ]**

or

to go to the first menu press **[ mode ]**


## Changing the ink - ribbon cassette

- ▶ Press [ set ], the print head moves to the right position
- ▶ Turn up the front cover and remove it
- ▶ Set the trigger mode switch (3) to position 2
- ▶ Remove the used cassette by the grip (21). Do not tilt
- ▶ Slide in the new cassette until it latches. While sliding in the cassette, slightly turn the rotary button (22) in direction of arrow.
- ▶ Position ribbon on right-hand roller guide (23) , push it between the guides of the print head (25) and the red foil mask (20) and position it on left-hand roller guide (24) as you can see in figure below
- ▶ Use the rotary button (22) to tighten the ink ribbon. The ink ribbon must lie completely behind the white plastic disks (23 u. 24) of the roller guides.
- ▶ Set the trigger mode (3) to the desired position
- ▶ Mount front cover

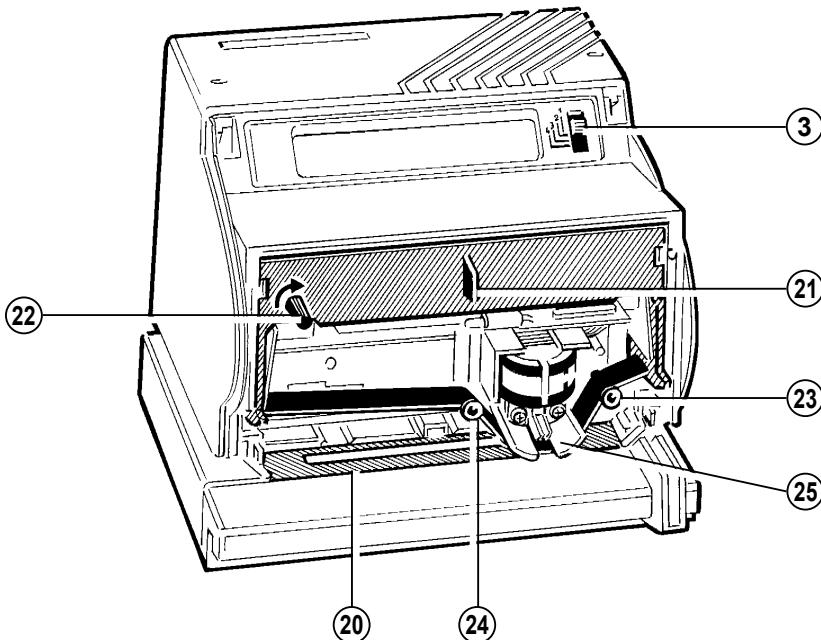

## Changing the ink - ribbon protection mask

- ▶ Press the [ set ] button: The print head moves to its right-hand limit
- ▶ Lift up the housing cover and remove it
- ▶ Set the trigger mode switch (3) to position 2
- ▶ First pull the left-hand end of the foil mask (20) forwards off the frame (tension in the mask is released)
- ▶ Pull the foil mask forwards off the right-hand side of the frame and discard it
- ▶ Fit the new foil mask with the arrow marks (13) and (14) to the front (see figure on Page 12). First push it on to the right-hand side of the frame until it reaches the stop.
- ▶ Tension it slightly and push it on to the left-hand side of the frame until it reaches the stop
- ▶ Reset the trigger mode switch (3) to the required position
- ▶ Refit the housing cover

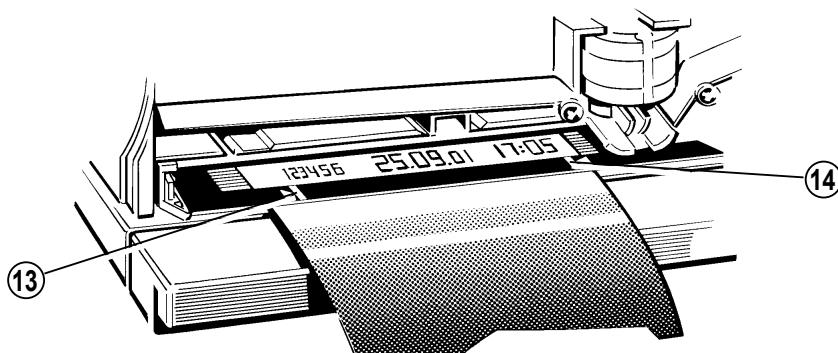

# Additional functions in Model 785 + 787

## Chip card functions



By using the programmable REINER chip cards, the Model 785 and 787 can be extended with the following functions:

### Note

To use these functions, chip card function must be active (see page 22, Settings, **CHIPCArd on**)


- Key function (printing disable) (see page 29)
- Printing a supplementary operator's identification (see page 29)
- Individual imprint, stored on the chip card (see page 29)
- Additional second print line (see page 30)



### Insert the chip card smooth to the stop:

The chip must be facing to the operator.

Insert the chip card vertically into the slot and after a noticeable resistance push it down smooth to the stop. The currently set imprint appears in the display.

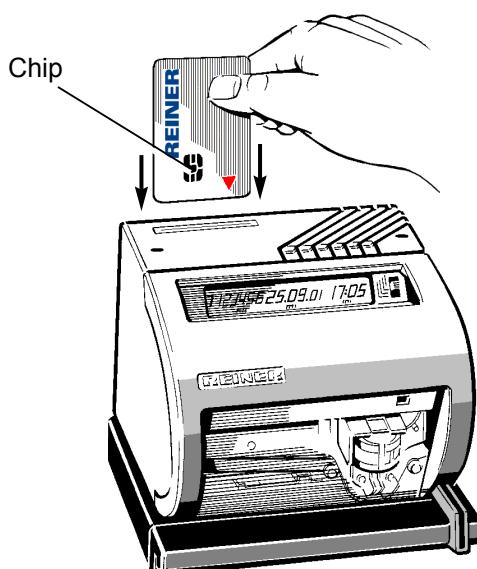

## Key function (printing disable)



After activating the chip card function (see page 22, chip card on) printing is only possible with an inserted chip card.

If the chip card is missing, **InSErT CHIPCArd** will be displayed.

## Operator's identification on the chip card



An operator's identification stored on the chip card can be printed at the end of an imprint. This operator's ID can be combined with a standard imprint, stored in the device or with a customer imprint, stored on the chip card.

First, the chip card function must be active (see page 22) and the desired number of an imprint must be entered.

After inserting the chip card, the printing process can be triggered.

The maximum printing width is 60 mm, so the operator's identification cannot be included with all imprints.

(see pages 13 ... 17)

Imprint example:

123456 **29.05.08 09:40** BSP operator's identification

## Printing of the first print line (Line 1) from chip card



Before printing the Line1 stored on the chip card, the chip card function must be active (see page 22) and imprint no. 00 must be set (see page 13)

- ▶ Insert the chip card. Subsequent the imprint appears in the display and the device is ready to print the first text line

## Printing of the second print line (Line 2)



The second print line can only be printed by Model 785 and 787. Using Settings, the various types of line switching can be selected and adjusted (see page 25, 'switch line')

An individual, second line of text can be stored on the chip card. This text can be printed alone, or added to an imprint stored either in the machine or on the chip card. To do so, the **chip - card function must be active** and the chip card must be inserted in the machine (see page 22, 'chip card')

### Imprint examples:

**123456 29. MAY 2008 09:38** ← first print line (line 1)

**FURTWANGEN IM SCHWARZWALD** ← second print line (line 2)

## Printing of the second print line with Model 785

### a) Setting Switch line = 0

- ▶ Press the key **[ line ]**: The Display shows:  
**TEXT LInE 2**

If the **[ line ]** is pressed again before stamping was triggered, this display is erased and line 1 of the set imprint is shown again

- ▶ Move a document to required printing position and trigger stamping operation.  
After stamping, the display automatically shows the selected imprint again.



If you want to print the second line again, **[ line ]** has to be pressed again

### b) Setting Switch line = 1



**Note**

With this setting, Line 2 could be printed as often as you want until the [line] key is pressed again to return to line 1 of the selected imprint

The printing process can be triggered as described on page 30, a

### c) Setting Switch line = 2



**Note**

With this setting, after every stamping the machine automatically switches to the next line

## Printing of the second print line with Model 787



**Note**

Model 787 contains a standard function for '**semiautomatic two-line stamping**'

A solenoid has been added to the depth stop to create a stop unit. Using the standard setting (Setting 'Switch line = 0'), the depth stop will be moved automatically to a predefined line-spacing distance for stamping the second print line (see also page 38, 'Technical data')

### a) Setting Switch line = 0



**Note**

This setting provides the same function as described on page 30, a

There is no line shifting

**b) Setting Switch line = 1 (standard setting)**



**Note**

With this setting, after every stamping the machine automatically switches to the next print line, and at the same time automatically changes line.

- ▶ Push a document against depth stop and trigger the stamping operation.  
Line 1 will be printed.  
The display switches to **TEXT LinE 2**
  
- ▶ Move the document against the stop again and trigger another stamping  
  
Line 2 will be printed  
The Display returns to the selected imprint and the depth stop returns to print line 1 position.



**Note**

Using the **[ line ]** key, it is also possible to switch manually to print line 2. In this case, the feed unit does not change the position of the depth stop.  
After stamping the machine automatically switches to print line 1

**c) Setting Switch line = 2**



**Note**

With this setting, after every stamping the machine automatically switches to the next print line.  
There is no automatically change of the position of the depth stop



### Note

- With Models 785 and 787, the RS 232 interface can be used to connect the machine to a PC
- The connection can be used as though it were to a printer. Data can be sent from an application program to the Multiprinter, which will print them.
- An interface description to enable application programs to be written is available from REINER
- The interface connection is on the rear of the machine, behind the round cover



### Caution

To avoid damage to the machine and malfunctions due to electrostatic discharge, keep the cover over the interface socket whenever no cable is connected !



The built-in radio clock receives automatically the central european time. The precondition for this is the activation of the radio clock (see page 22, 'Radio clock').

The time zone for eastern or western european time has to be adjusted (see page 23, 'Time zone').

Reception of the radio time signals depends on the distance of the device from the time signal transmitter Mainflingen (Frankfurt / Germany) and on the device location (e.g. building).

The device automatically establishes radio communication with the time signal transmitter at 3 a.m. The symbol  appears in the display when the device is receiving the time signals. If the device receives no or only inadequate signals, the attempt is discontinued after 12 minutes and thereafter repeated hourly until a satisfactory signal has been received.

After activating the radio clock, its symbol is shown above the imprint in the display with following status:



not flashing = reception ok, date / time set correctly.



slowly flashing = poor reception.

The attempt to receive will be discontinued after 40 seconds.



flashing once per second = receiving a good signal: After the device has received the same time information (date + time) three times in succession, the time is updated inside the device. If the device receives different time information, it discontinues the reception of the time signals after 12 minutes.

### Manually triggering of the signal reception :

- ▶ Press [ **fkt** ] and at the same time press [ **time** ]

The period of signal reception is prolonged if stamping operations are carried out or settings are changed during the attempt to receive signals.

## User's hints and error codes

Display	Cause	Recommendation
<b>CHArGE bAT</b>	Accumulator is charging, device is not ready for operation	Connect device to mains. Device is ready after approx. 15 minutes
<b>EMPTY bAT</b>	Accumulator is discharged	Connect device to mains. Device is ready after approx. 15 minutes. Accumulator is fully charged after 20 hours
<b>InSERt CHIPCArd</b>	Chip card was not or incorrectly inserted	Insert chip card correctly (insert it smooth to the stop)
<b>InSERt CArd FAstEr</b>	Chip card was incorrectly inserted or Chip card was inserted but not deep enough (not to the stop)	Insert chip card correctly (insert it smooth to the stop)
<b>Display is dark</b>	<ul style="list-style-type: none"> <li><b>Accumulator operation:</b> Accumulator is discharged</li> <li><b>Mains operation:</b> Technical malfunction</li> </ul>	Connect device to main. It is ready after approx. 15 minutes, accumulator is fully charged after 20 hours  Call technical service or competent distributor
<b>Error 02</b>	Set number of imprint is not available	Enter a valid imprint (see page 13 ... 17)
<b>Error 04</b>	EEProm fault	Press <b>[ set ]</b> and re-enter date and time
<b>Error 08</b>	Imprint exceeds maximum width of 60 mm	Press <b>[ set ]</b> and shorten the imprint, e g deactivate pre text

Display	Possible reason	Recommendation
<b>Error 10</b>	<ul style="list-style-type: none"> <li>Print process not executed completely</li> <li>Ribbon cassette is blocked</li> </ul>	<ul style="list-style-type: none"> <li>Press <b>[ set ]</b> and try to print again</li> <li>Check ribbon cassette and replace if necessary</li> </ul>
<b>Error 11</b>	Numberer 1 :	delete error indication by pressing <b>[ set ]</b> , following
<b>Error 12</b>	Numberer 2 : Skip is larger or even 10 but numberer of imprint is single-digit	set 'Skip n1' or 'Skip n2' to a value less than 10 (see page 23 / 24)
<b>Error 15</b>	<ul style="list-style-type: none"> <li>Chip card inserted incorrectly</li> <li>Chip card is invalid</li> </ul>	Insert a valid REINER chip card correctly
<b>Error 16</b>	Not a REINER chip card	Use REINER chip card
<b>Error 17</b>	Key number of chip card differs from key number stored in the device	Correct key no. on chip card or change the setting of the device
<b>Error 18</b>	Data on chip card exceed the maximum range of imprint	Enter another imprint to the chip card
<b>Error 19</b>	Number of imprint on chip card doesn't exist	Enter a valid number of imprint to chip card

## Reset



### Note

- With a Reset the device will be set to a defined status. Furthermore the program run will be restarted (warm-start)
- The pin used to operate the Reset should have a diameter of about 2,5 mm and a rounded end
- If a thinner pin with a sharp end is used (particularly a metal pin, e.g. a straightened paper clip), there is a danger of damage to the switch and PCB if it is not used very carefully

### Carry out a Reset

- Remove the front cover (7)
- Press a thin pin-shaped object, about 4 cm long, vertically into the small circular opening (see arrow) on the left below the display (using for example a bent open paper clip) until the display shows **Test**
- Close the front cover (7)

The program is restarted. If the program is now being executed correctly, time, date and data of numberer will be reset and can now be set again



## Technical data

### Dimensions

Model 780 and 785 : 175 x 160 x 163 (W x D x H in mm)  
Model 787 : 175 x 160 x 171 (W x D x H in mm)

### Weight

Model 780 and 785 : ca. 3,2 Kg  
Model 787 : ca. 3,6 Kg

### Electrical data

Mains voltage : 230 V ~  
Mains frequency : 50 Hz  
Power consumption : max.16 W  
Stand-by time per  
accumulator charge : 780, 785 : 7 days or 1000 impressions  
787 : 7 days or 300 two-line impressions  
Accumulator charging time : ca. 20 hours

### Impression data

Max. size of impression : 60,44 mm x 3,2 mm (W x H)  
Paper thickness : multiple sheet with max. 2 mm thickness  
Carbon-copy performance : 3 to 4 carbon copies on NCR paper  
Ink ribbon capacity : min. 40 000 impressions (imprint no.  
38 with pre-text)  
Stamping time : ca. 0,5 seconds  
Stamping sequence : > 2 seconds  
Noise level : max. 74 dB(A) at print procedure  
(workplace-related  
emissions to ISO 7779)

### Environmental conditions

Climate class : generally to DIN IEC 68  
Operation and storage : temperature 0° C to + 40° C  
relative humidity 10 % to 85 %  
Transport: temperature - 30° C to + 60° C  
relative humidity 10 % to 85 %

## Certifications



### Identification

This printer satisfies the requirements of the EMV guideline 2004 / 108 / EG with regard to 'Elektromagnetic compatibility' in accordance with EN 55022 and EN 55024.

As verification, the scanner bears the CE label.

### Tested safety

REINER - Multi-Printers are manufactured and tested in compliance with the safety standard EN 60950 - 1: 2001



### WEEE Registration number

Disposal of electronic apparatus must not be in residual waste or domestic waste.